

BRACKET COMPATIBILITY TABLE

<i>THIS BRACKET</i>	<i>SUPPORTS THESE SPEAKERS</i>	
	<i>SIGNATURE SERIES</i>	<i>CORE SERIES</i>
ESS-BRKT-IC-4	SIG-34-IC SIG-54-IC	
ES-ESS-BRKT-IW-6	SIG-36-IW SIG-36-IWDVC SIG-56-IW SIG-56-IWDVC SIG-56-IWSURR SIG-76-IW SIG-76-IWSURR	ES-CORE-16-IW ES-CORE-36-IW ES-CORE-56-IW
ES-ESS-BRKT-IW-8	SIG-38-IW SIG-58-IW SIG-78-IW	
ES-ESS-BRKT-IWLCR-6	SIG-56-IWLCR SIG-76-IWLCR	ES-CORE-36-IW-LCR ES-CORE-56-IW-LCR
ES-ESS-BRKT-IC-6	SIG-36-IC SIG-36-ICDVC SIG-56-IC SIG-56-ICDVC SIG-56-ICSURR SIG-76-IC SIG-76-ICSURR SIG-36-AW-IC SIG-36-AW-ICDVC	ES-CORE-16-IC ES-CORE-36-IC ES-CORE-36-IC-DVCS ES-CORE-56-IC ES-CORE-56-IC-DVCS ES-CORE-36-AWIC ES-CORE-36-AWIC-DVCS ES-CORE-56-AWIC ES-CORE-56-AWIC-DVCS
ES-ESS-BRKT-IC-8	SIG-38-IC SIG-36-POINT SIG-58-IC SIG-58-ICDVC SIG-58-ICSURR SIG-56-POINT SIG-78-IC SIG-78-ICSURR SIG-76-POINT ESS-SUB-SNGL-8	ES-CORE-18-IC ES-CORE-38-IC ES-CORE-38-IC-DVCS ES-CORE-36-IC-POINT ES-CORE-38-AWIC ES-CORE-38-AWIC-DVCS ES-CORE-58-IC ES-CORE-58-IC-DVCS ES-CORE-56-IC-POINT
<i>SEE NEXT PAGE FOR IMPRESSION SERIES</i>		

<i>THIS BRACKET</i>	<i>SUPPORTS THESE SPEAKERS</i>
ES-IM4-BRKT-IC	KIT-ES-IM4.1-IC-SYS KIT-ES-IM2.1-IC-SYS ES-IM4IC ES-IM6-BP-SUB