



**Triad Speakers Warranty Information**

For your convenience, we have included space below for you to record your amplifier model and serial number, purchase date, dealer's name, and phone number. You will need the following information in the event your amplifier needs servicing. Please keep this manual and the sales receipt in a safe place.

Model: \_\_\_\_\_ Serial #: \_\_\_\_\_

Model: \_\_\_\_\_ Serial #: \_\_\_\_\_

Dealer Name: \_\_\_\_\_

Purchase Date: \_\_\_\_\_ Phone #: \_\_\_\_\_

**Triad North American Warranty**

Triad products are warranted to be free from defects in materials and workmanship for the period stated below when operated under normal use:

Amplifier: Warranty three ( 3 ) years • Loudspeaker: Warranty ten ( 10 ) years

The limited warranty period begins on the date of purchase. This limited warranty is extended only to Triad products and is expressly in lieu of other warranties expressed or implied. The warranty is extended only to the original purchaser and is not transferable. Warranty covers only products sold in the United States by authorized Triad Dealers.

Should any defect in materials or workmanship occur within the limited warranty period, ontact Triad Service at 1-503-517-2668 to obtain a Return Authorization (RA) number. The product must be returned to Triad Speakers prepaid, with proof and date of purchase and in original packaging. If you do not have original packaging, you may purchase packaging from your dealer or Triad Service. The RA number must be clearly visible on the outside of the box.

Transit damage is not covered by this limited warranty.

**Triad Speakers, Incorporated**

 
15835 NE Cameron Blvd. • Portland, Oregon 97230  
503.256.2600 Sales • 503.517.2668 Service

www.triadspeakers.com  
Part #905-1000 Rev. 8




**InRoom Products**

**Products Covered:**

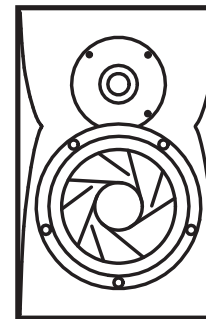

 Sat (Satellite)  
LCR  
Center  
MiniMonitor  
Monitor

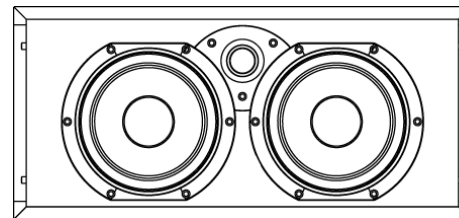

**Engineered In The USA**

Triad Speakers, Incorporated • Portland, Oregon  
www.triadspeakers.com

***Thank You...***

For purchasing Triad's line of high performance InRoom speakers.

Each loudspeaker is created with the utmost attention to quality and designed to be architecturally flexible with your room decor.

All Triad speakers are engineered and hand-crafted with pride in the United States of America.

Please take the time to review this information. We have developed this manual so you would be familiar with all the performance features, and could better appreciate the superb engineering that has been built into your Triad loudspeakers.

 
Thanks again and happy listening.

Larry Pexton  
President

**Notes**

Notes section with horizontal lines for writing.

## InRoom Speaker Grill Installation

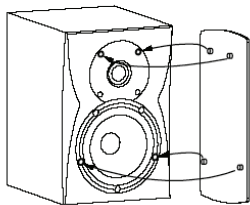


### "Socket" Style Grill

Position the rubber grill sockets onto the speaker grill pins.

Press gently on the outside of the grill at the sockets to secure the grill to the speaker.

 To remove the grill, gently pull the sides of the grill away from the speaker.

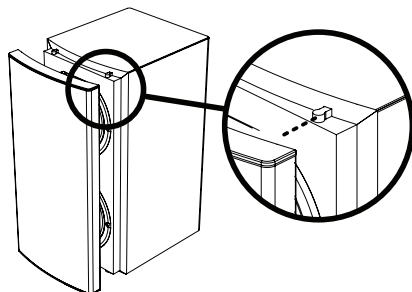

### "Snap On" Style Grill

Position the grill onto the front of the speaker aligning the grill clips to the studs.

Press gently on the outside top grill edge and push the grill onto the speaker. Repeat with bottom grill edge.

To remove the grill, gently pull on the sides of the grill (top) away from the speaker. Repeat with bottom.

 
 
### Finish Maintenance & Care

The paint and veneer finish on all Triad speakers are designed to last a lifetime with minimal care. No polishing is necessary to maintain surface shine and luster.


If cleaning the surface becomes necessary gently wipe the speaker box with a soft cloth lightly dampened with a mild soap and water solution.

## Table of Contents

Triad Installation Guide	Page:
Table of Contents	2
Volume Control Wiring Diagram: satellites only	3
Notes	3
Volume Control Wiring Diagram: satellites & subwoofers	4
Grill Installation	5
Finish Maintenance & Care	5
Warranty and Dealer Information	6

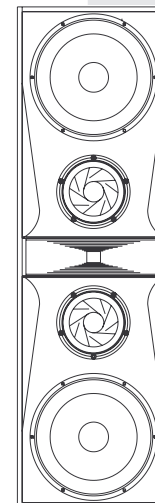

## Volume Control Wiring Diagram: satellites only

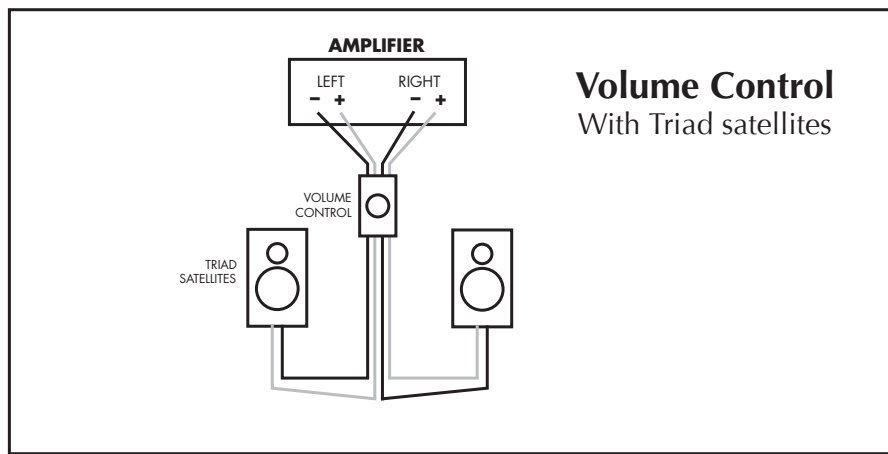 

### Notes:

---



---



---



---

 


---



---

## Volume Control Wiring Diagram: satellites & subwoofers

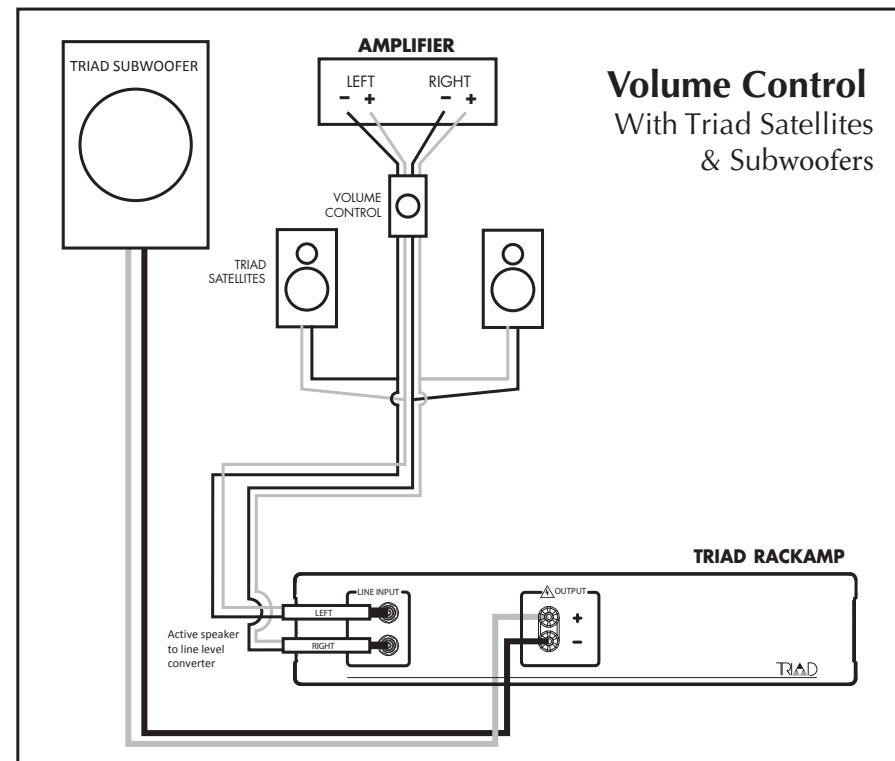

From the volume control, "Y" the speaker wires so that one set goes to the satellites, and the other set goes to the Triad Subwoofer RackAmp through active speaker to line level converters.